


# SPRING GATE

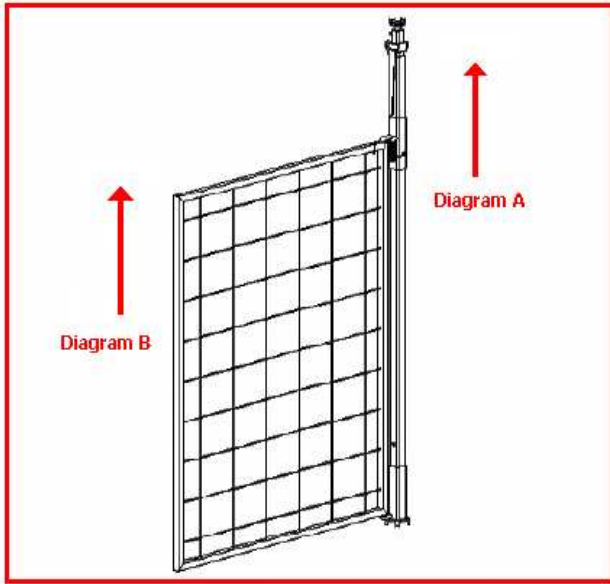

## Dismantling the Spring Gate

- 1a. Release tension spring and slide Part A (Top Bracket) upwards to release (Diagram A).
- 1b. Remove the fence by sliding upwards (Diagram B).
- 2a. Dismantle post.
- 2b. Unscrew bottom foot and follow reverse procedures as per Assembly Kit – Point 2 (2a., 2b., & 2c.)

