

# SPRING GATE ASSEMBLY KIT

## Installing Spring Gate

1. Remove bottom foot by unscrewing it counter clockwise (Diagram A).
- 2a. Slide Part A (Top Bracket) onto the post with twin pin facing bottom foot/floor.
- 2b. Slide Part B (Bottom Bracket) onto the post with pin facing Part A (Top Bracket) / ceiling.
- 2c. Screw bottom foot back clockwise (Diagram B).
- 3a. Erect post in vertical position.
- 3b. Ensure that the hook on the bottom bracket is in between, NOT in line with the feet (Diagram C).
- 3c. Slide Part A (Top Bracket) upwards to fit the fence gate height (Diagram D).
- 4a. Sit fence gate into Part B (Bottom Bracket) (Diagram E).
- 4b. With fence gate in position, slide Part A (Top Bracket) onto predrilled holes on fence gate and sit tension spring in position (Diagram F).
5. Test fence gate by opening it 90° from its closed position (Diagram G).
6. Check installed components after each shift and after each adjustment (at least once per day).
7. If any component has to be removed for any reason, the operator must be tied off to a secure point. **Do NOT tie off to the fences or post. This system is NOT a tie-off point!**

