



## KWIK POST 12'-6" - KP126

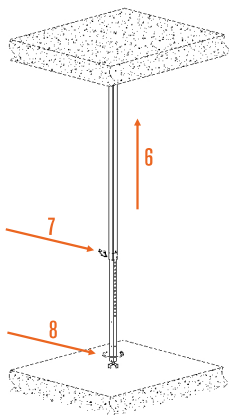

### Installing Kwik Post 12'-6" - KP126

1. Ensure that the bottom foot is properly screwed in.
2. Unlatch the spring lock pin that is holding the inner tube in place.
3. Away from the edge, measure the height from the floor to the ceiling.
4. Working from left to right, place the post no closer than 2" (50mm) from the edge.
5. Adjust the foot of the post so that it is square to the edge.
6. Extend the outer tube to the ceiling.
7. Reinsert the spring lock pin where the holes in the outer and inner tube meet.
8. Twist the body of the post counter clockwise until the red inspection gauge at the top of the post disappears.
9. Step back approximately five feet (1.5m) away to look at the inspection gauge. If red is still showing, twist the body of the post counter clockwise to further tighten the post so that the red inspection gauge disappears

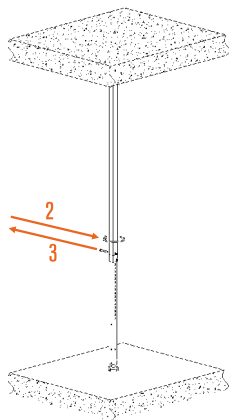

### Dismantling Kwik Post 12'-6" - KP126

1. Remove the temporary guardrail or Safety Fence from the Kwik Post and place it away from your work area so as not to impede additional removal operations.
2. Twist the body of the post clockwise until it is loose enough to be removed from its upright position.
3. Remove the spring lock pin from the body of the Kwik Post. Collapse the outer tube completely.
4. Replace the spring lock pin in the body of the Kwik Post so that the inner tube is secure.